

# LED HEAD LIGHT INSTALLATION INSTRUCTIONS

1. Work under the specified voltage (DC10-30V)
2. This head light includes 5 functions: high beam, low beam, park light, indicator and heating function
3. Wiring requirements:



4. Please use the heating function when the environment temperature is  $\leq -3^{\circ}\text{C}$ . Usually the heating function can melt always the snow covered on the light's front cover in around 3 minutes. The time of melting always the ice depends on the environment temperature and the ice's thickness.
5. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.
6. Keep heat-sink clean and exposed to maintain air flow.

**Tips:** Please remember to turn off the heating function's switch, otherwise the heating function may run out of the battery's electricity as it is difficult to aware that the heating function is working or not by naked eye.

## Illustration of Multi Mounting Options :

